



**This must be a relaxed fit with no preload.
Adjust Eyebolt if necessary.**

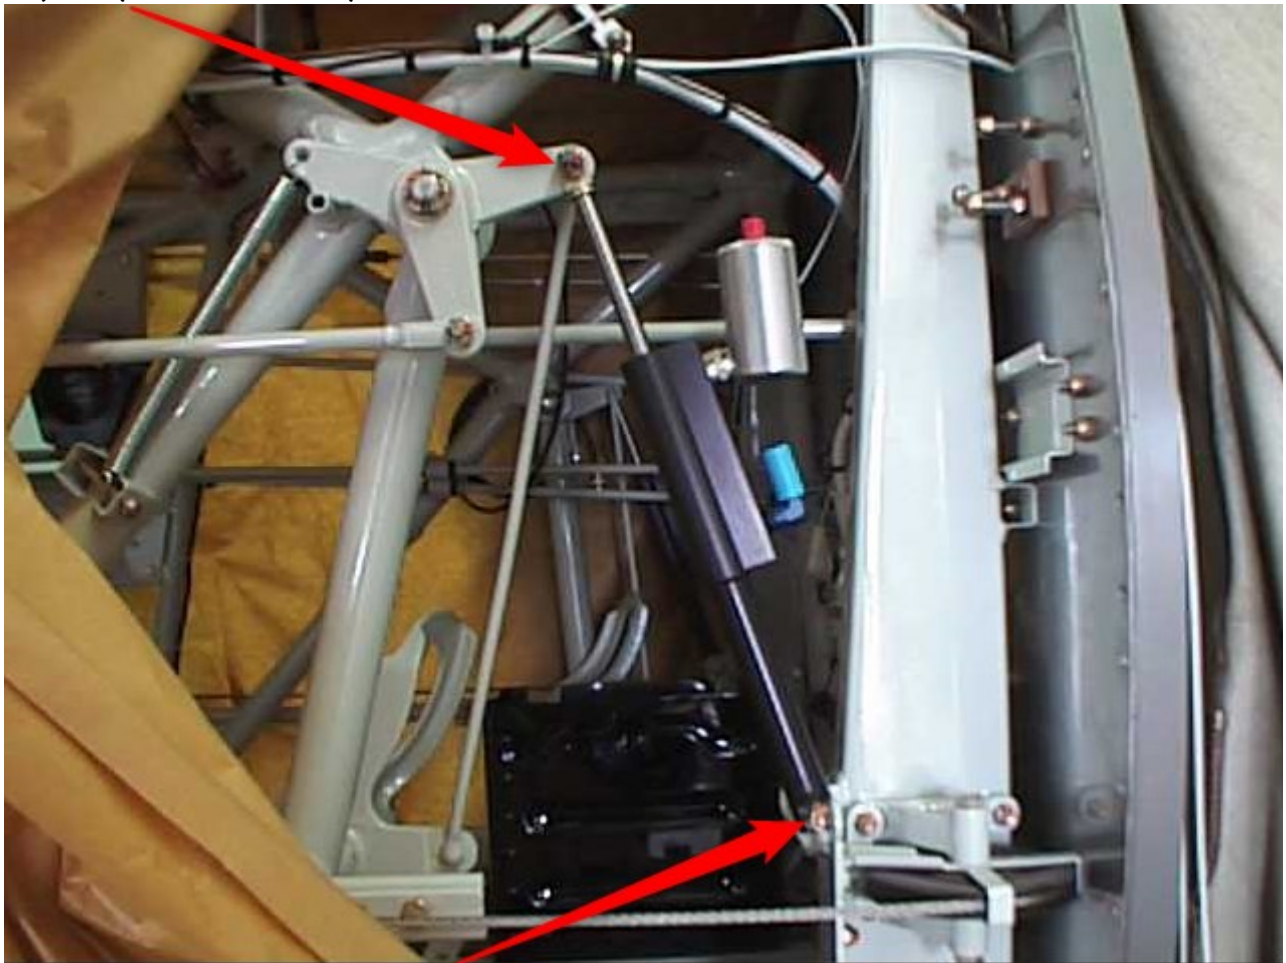

**AN4-25A Bolt, do not overtighten.
Master cylinder must be free to pivot.**

On BT Brakes these holes may be drilled to 5/16". If so, use the enclosed Busking Kit.



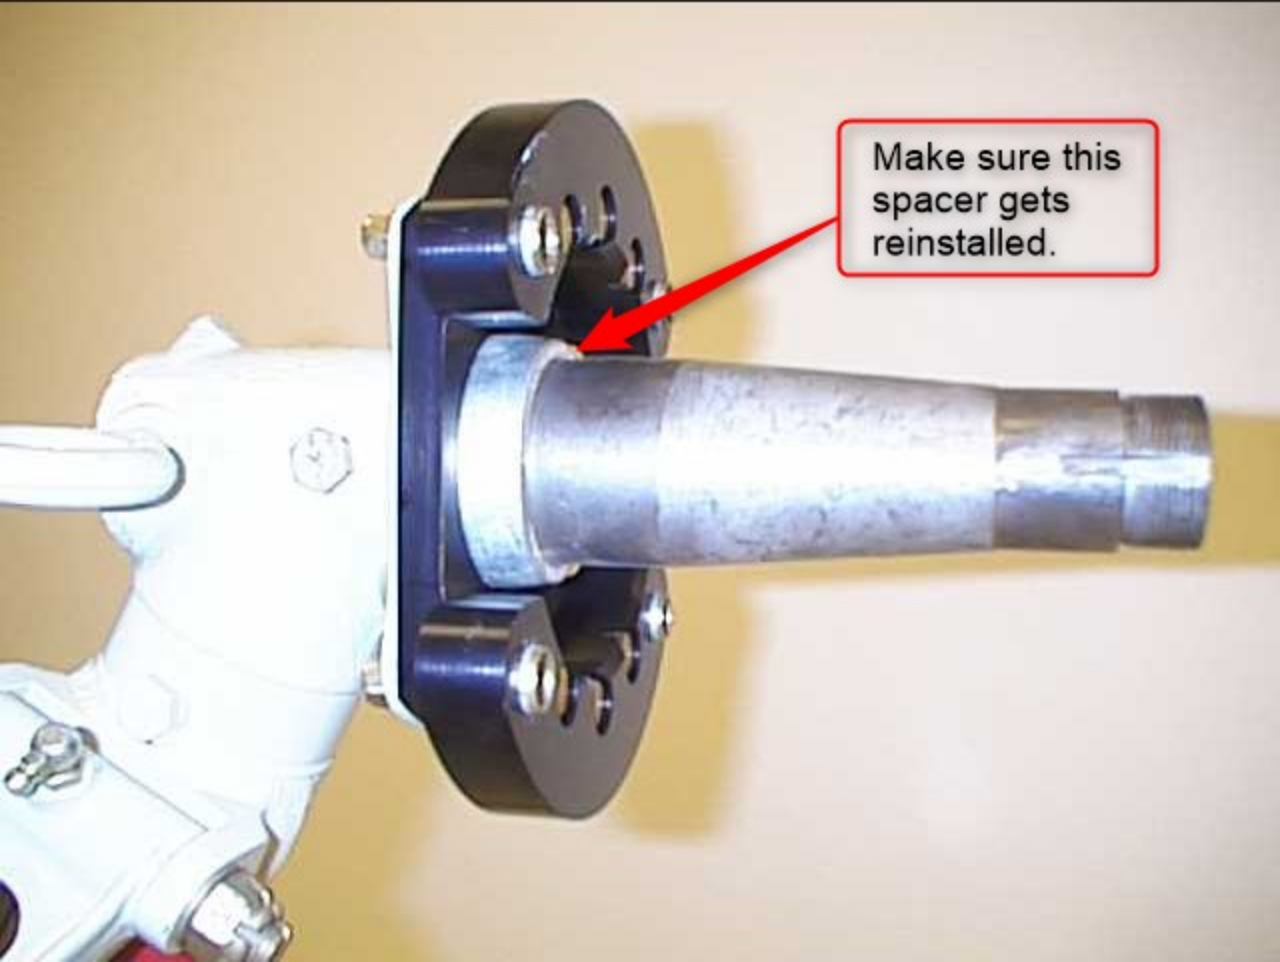

Make sure this
spacer gets
reinstalled.



